


MOJOGEAR MINI EVO

Overview

- ① Button
- ② LED power indicator
- ③ USB-C input/output
- ④ USB output

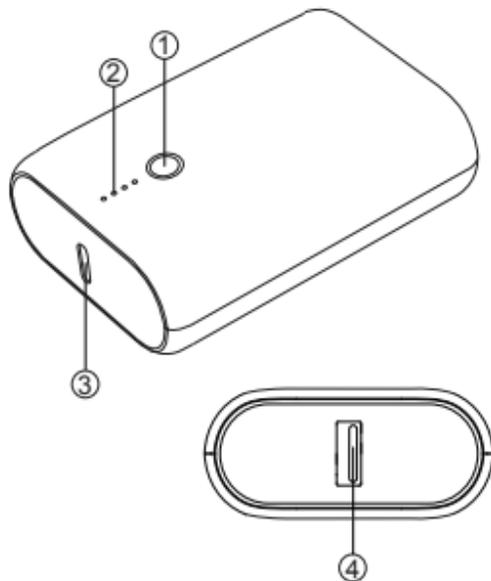

Power indicator


- The powerbank will turn on and off automatically.
- Press the button to check the remaining battery power.
- When being charged, one of the LED lights will blink.
- When all 4 lights are continuously on, the power bank is fully charged.
- When fast charging is active, the bottom light will turn green.

How to charge the power bank

Connect the included USB-C cable (or any other cable with a USB-C connector) to a USB outlet (wall charger, laptop). To achieve maximum charging speed, we advice to use a USB outlet that supports 3A or 18W. Depending on the charging speed, it can take 2,5 to 8 hours to fully charge the power bank.

How to charge your devices

Connect a charging cable to the USB or USB-C port on the power bank. For some devices, you can use the included cable. You can charge two devices simultaneously, using both ports.

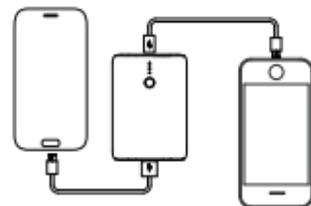

Low current mode

This power bank supports low power mode (trickle charging), to charge small devices that only support low current.

- To activate low current mode, hold the power button for 3 seconds.
- When in low current mode, the indicator lights will cycle every few seconds.
- To disable low current mode, hold the power button again for 3 seconds.